


PFScan

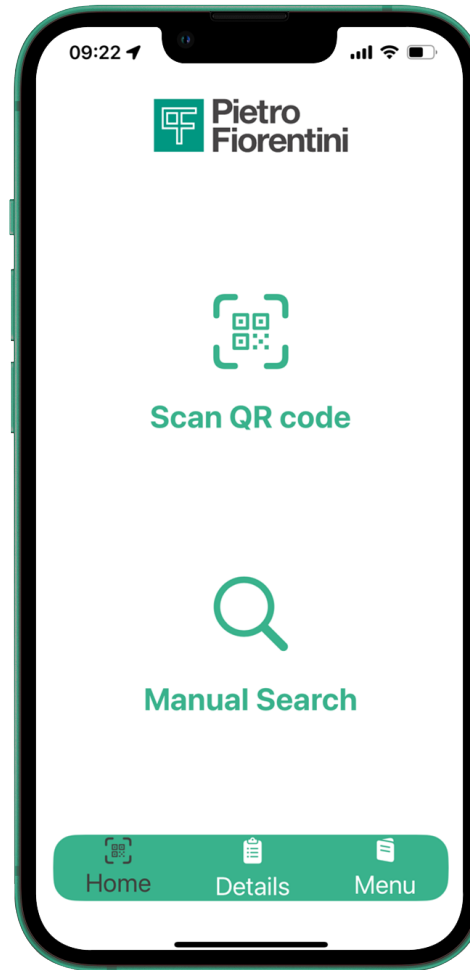

CONFIGURATION AND USER GUIDE

1

ACCOUNT CONFIGURATION

Page 3

2

RESET PASSWORD

Page 5

3

PRODUCT & SPARE PARTS KIT

Page 6

4

TECHNICAL DOCUMENTATION


Page 8

5

FEEDBACKS & LOG OUT

Page 11

1 - ACCOUNT CONFIGURATION

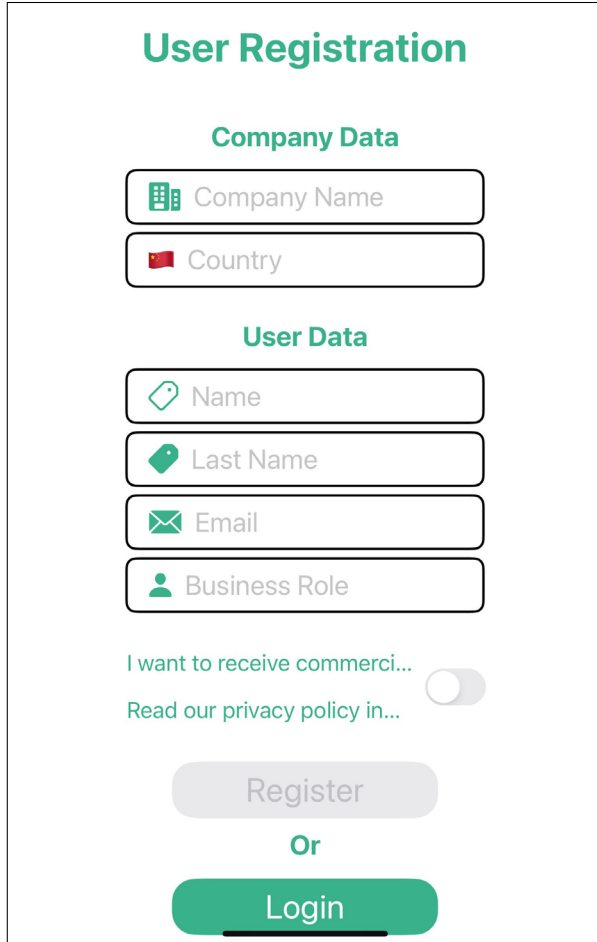

User Registration

Company Data


User Data


I want to receive commerci...

[Read our privacy policy in...](#)

Or

Enter company and user data, then **click** on **“Register”**.

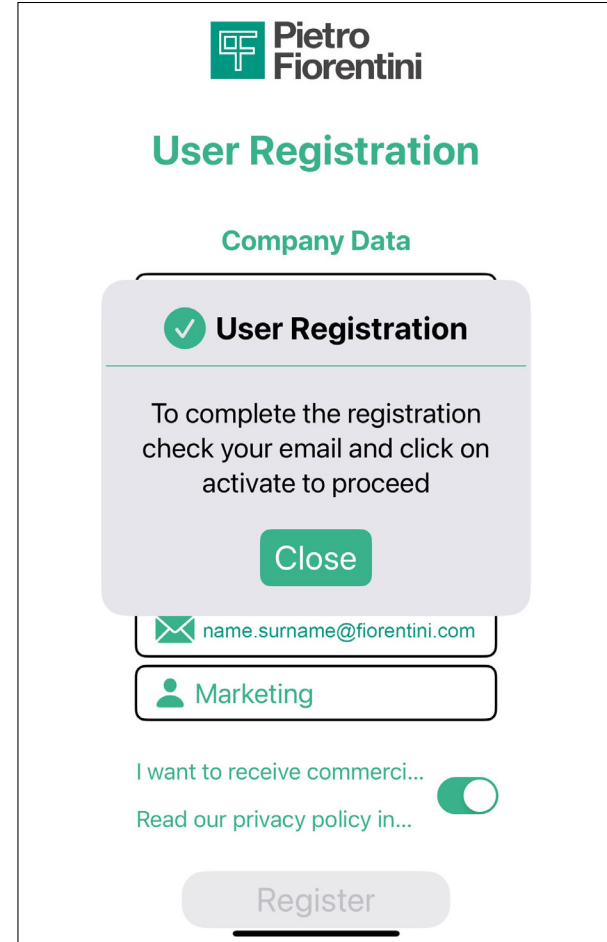

 Pietro
Fiorentini

User Registration

Company Data


User Registration

To complete the registration
check your email and click on
activate to proceed


I want to receive commerci...

[Read our privacy policy in...](#)

Check your email account to **activate** your account.

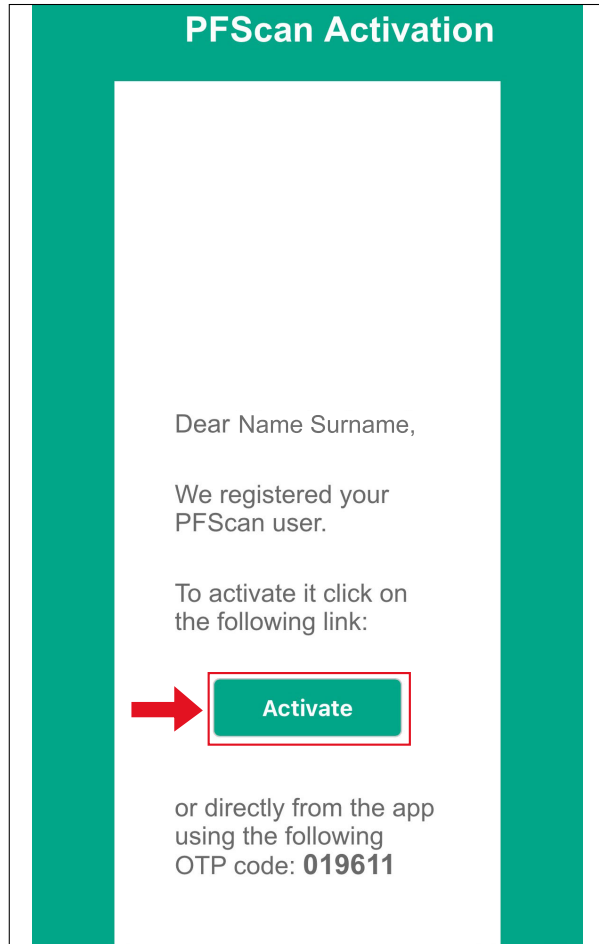


Confirm the account by clicking on the “**Activate**” button or **insert** the **OTP code** in the app to complete the configuration.

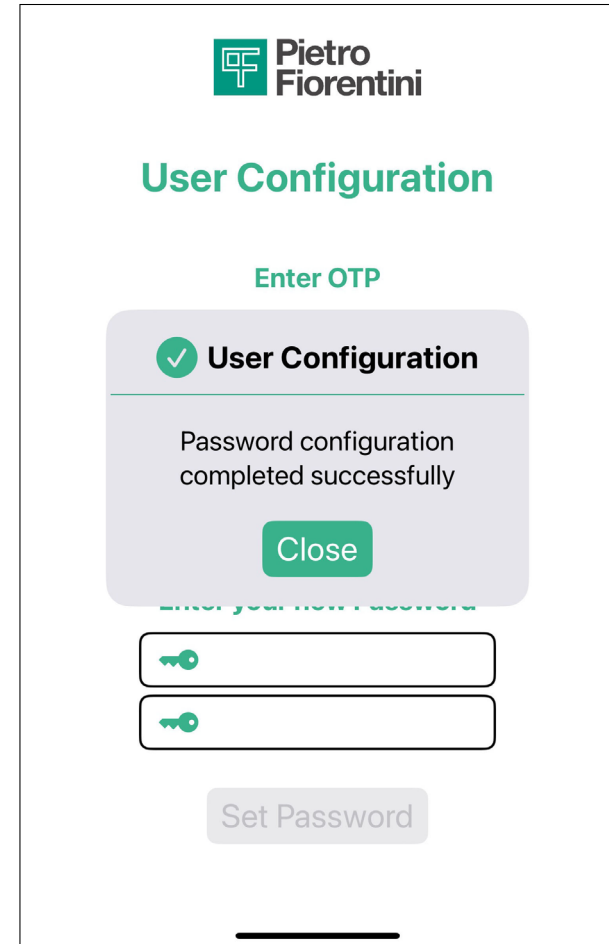

The **configuration** has been **completed**, now you can log in.

2 - RESET PASSWORD

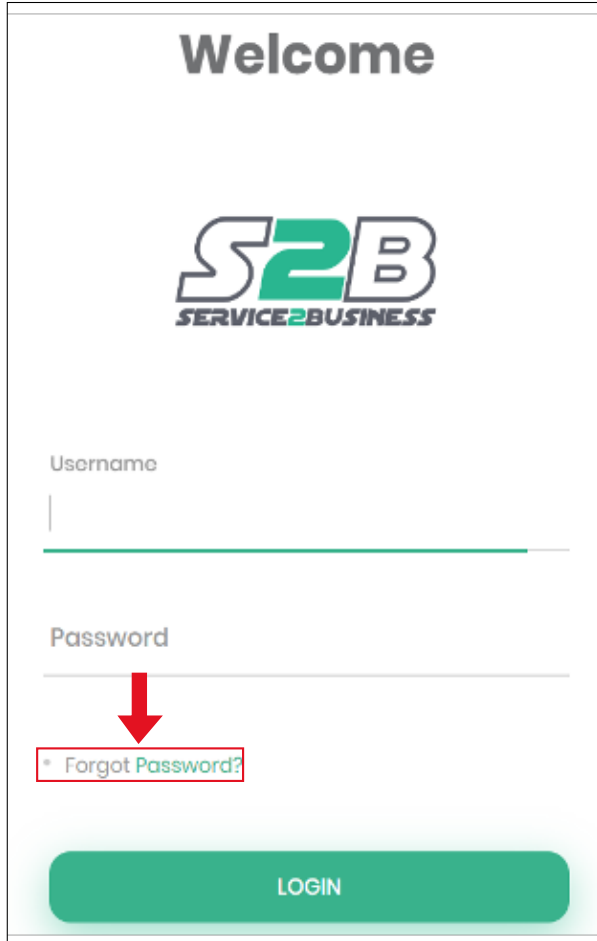

Welcome

S2B
SERVICE2BUSINESS


Username
|

Password

* Forgot Password?


LOGIN

Follow the link <https://s2b.fiorentini.com/> then click the “**Forgot password?**” button

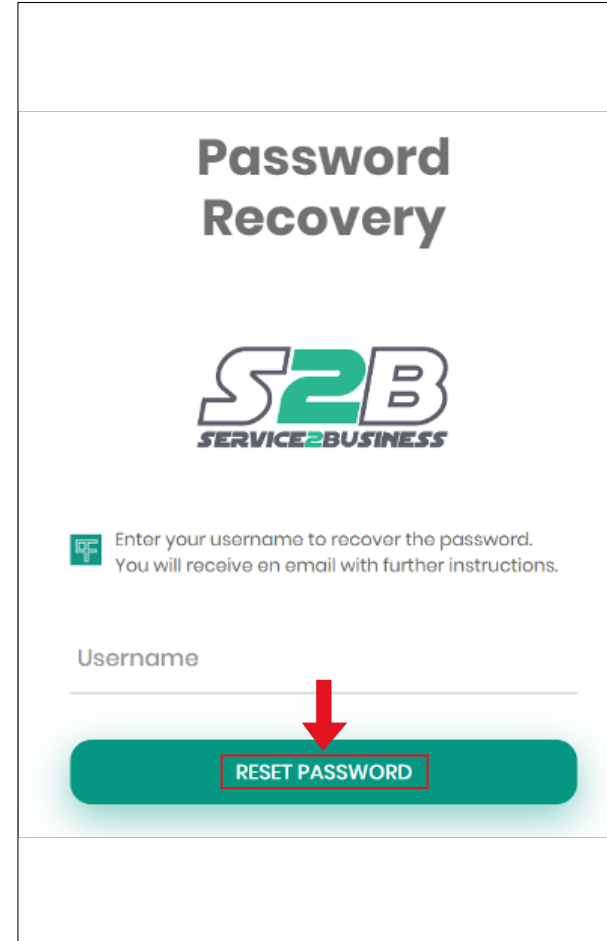

Password Recovery

S2B
SERVICE2BUSINESS


 Enter your username to recover the password.
You will receive an email with further instructions.

Username

RESET PASSWORD


Enter the registration mail, click “**Reset password**” button.
You will receive an email to change your password.

3 - PRODUCT & SPARE PARTS KIT

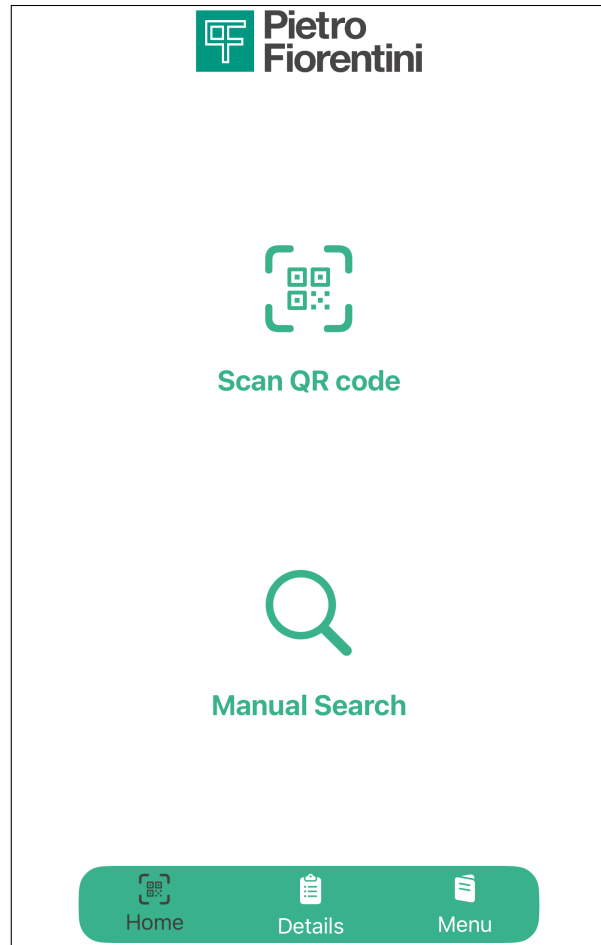


Frame the QR code or **enter** the product code **manually**


Attention: activate camera and geolocation consents

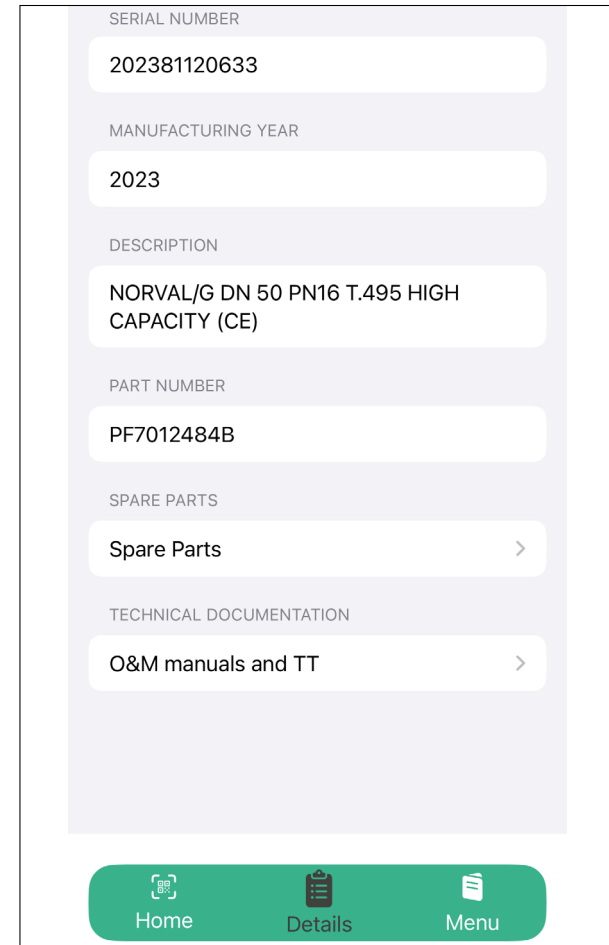

The app will display a **detailed recap** of the selected product

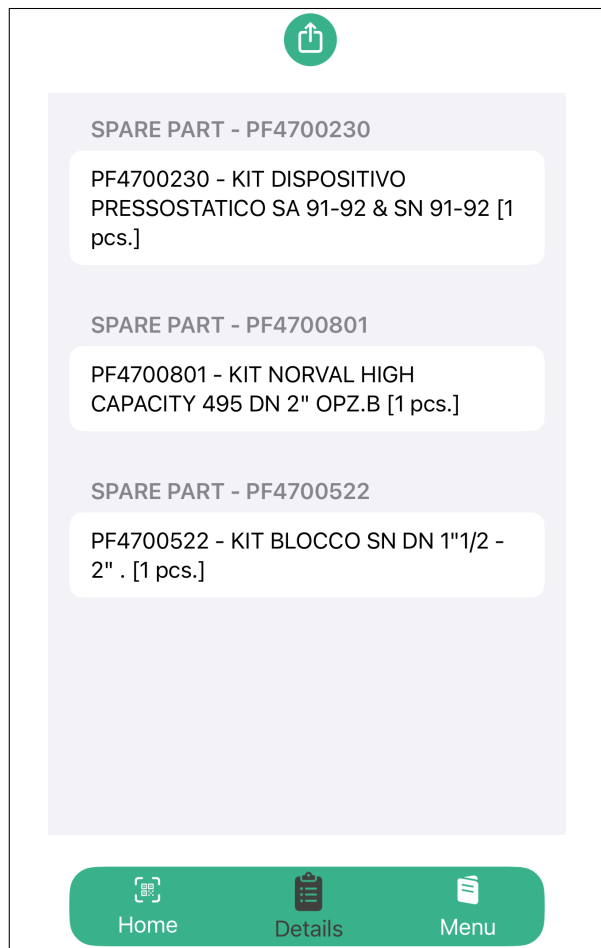


Click on the desired **spare parts kit** to view all the **corresponding part numbers**

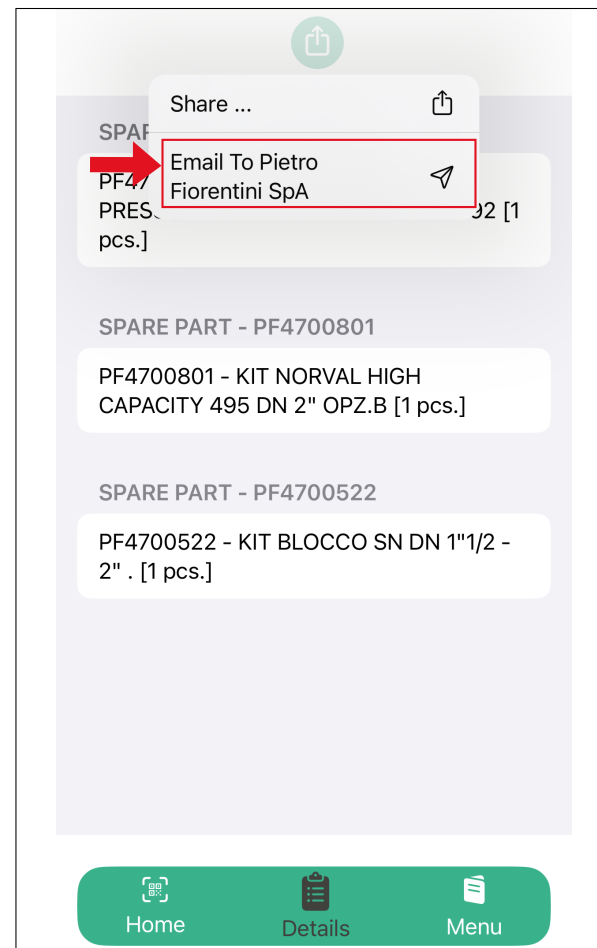

Click on **“Email to Pietro Fiorentini”** to send an order request

- venditeitalia@fiorentini.com - Italy
- anfrage@fiorentini.com - Germany
- sales@fiorentini.com - other countries

4 - TECHNICAL DOCUMENTATION

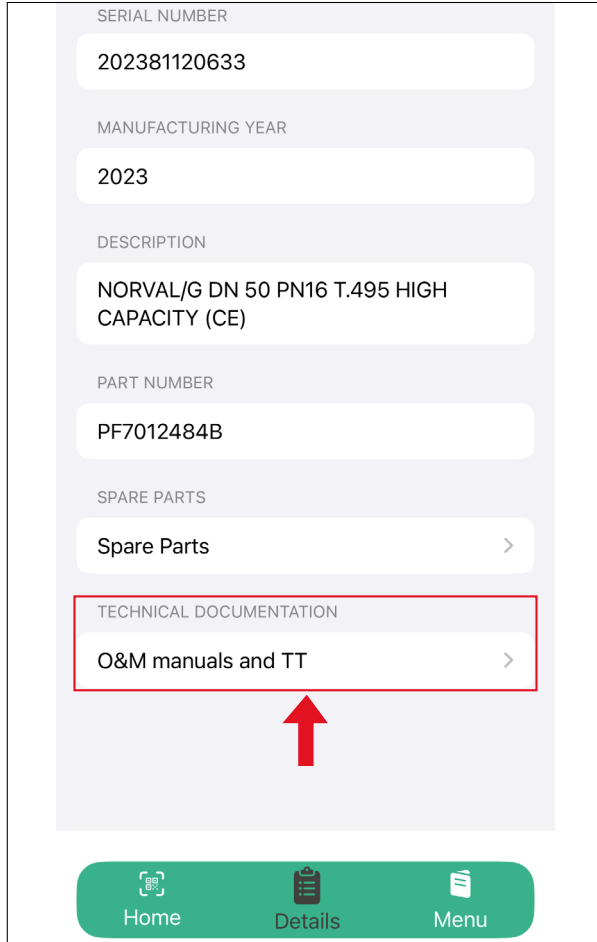

SERIAL NUMBER
202381120633

MANUFACTURING YEAR
2023

DESCRIPTION
NORVAL/G DN 50 PN16 T.495 HIGH CAPACITY (CE)


PART NUMBER
PF7012484B

SPARE PARTS
Spare Parts >

TECHNICAL DOCUMENTATION
O&M manuals and TT >

Home Details Menu

Click on the “**Technical Documenta-
tion**” section to consult the manual or
the technical tables

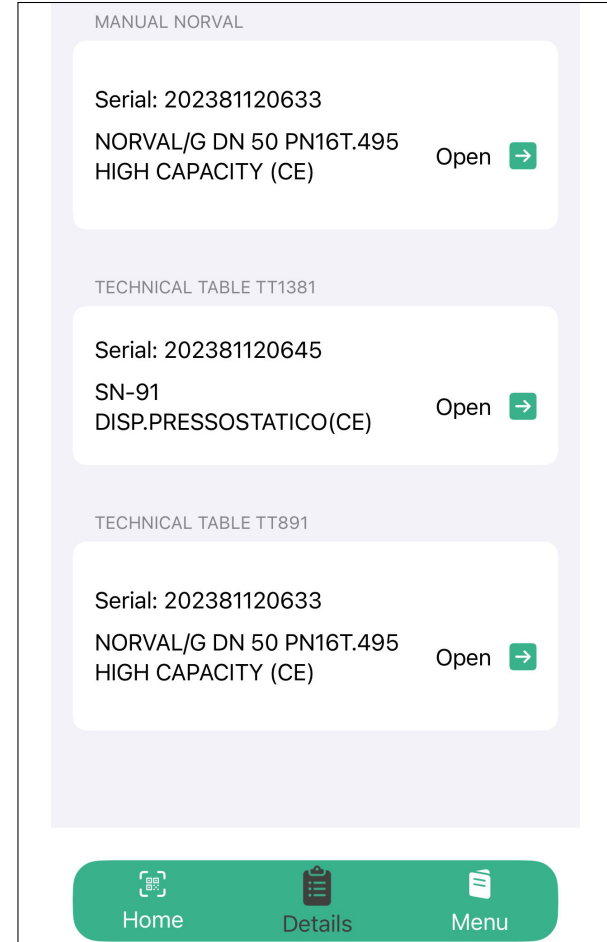

MANUAL NORVAL

Serial: 202381120633
NORVAL/G DN 50 PN16T.495
HIGH CAPACITY (CE) Open →

TECHNICAL TABLE TT1381


Serial: 202381120645
SN-91
DISP.PRESSOSTATICO(CE) Open →

TECHNICAL TABLE TT891

Serial: 202381120633
NORVAL/G DN 50 PN16T.495
HIGH CAPACITY (CE) Open →

Home Details Menu

The app will show you the **options**
available for consultation

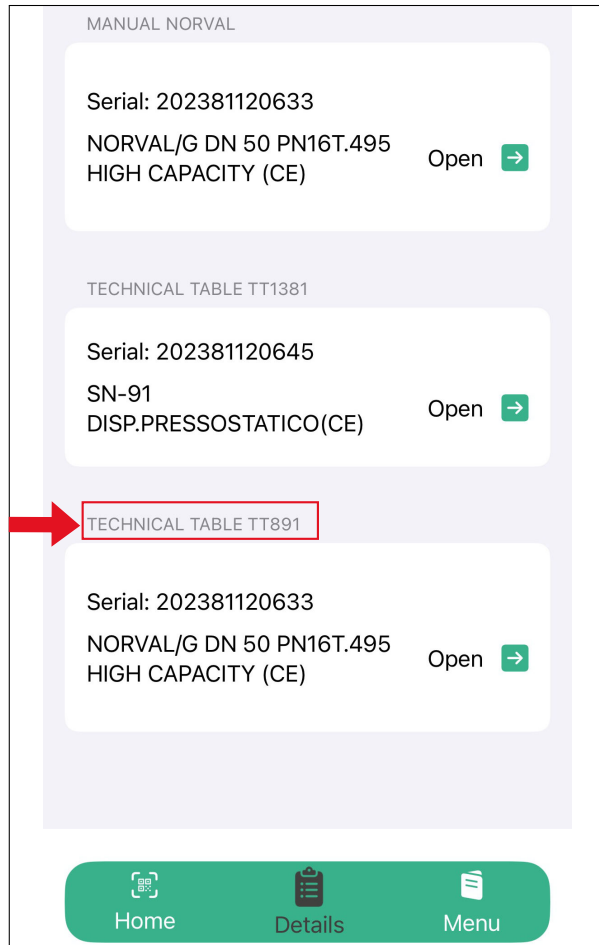

To **consult** the **technical table**, click on **“Open”** in the corresponding section

1 of 4

Pietro Fiorentini Spring Table Pressostatic device SN - SA T.T. Number TT1381

Revision: E Revision Date: 01-10-2021 Name: my6-admin-user151.65.236.139

Revision Notes:
ADD TABLE SN-91 - SA-91 (LP)

Spring Notes:
T.T. valid for devices produced after january 2007
For devices produced before january 2007, see T.T.370

1. SN-91 (NORVAL/SCN) "MAX PRESSIONE"

Item	Spring Code	Spring Color	d	Lo	De	N.	Spring Range (Bar)			
							Min	Min	Max	Max
1	2700680	Brown	2.3	60	35	0.025	0.025	0.035	0.04	
2	2700830	Red/Black	2.5	60	35	0.03	0.036	0.07	0.075	
3	2700920	White/Yellow	2.8	60	35	0.06	0.071	0.095	0.115	
4	2701040	White/Orange	3	60	35	0.085	0.096	0.16	0.17	
5	2701260	White	3.5	60	35	0.15	0.161	0.29	0.295	
6	2701530	Yellow	4	60	35	0.285	0.291	0.58	0.6	
7	2701790	Yellow/Black	4.5	60	35	0.56	0.581	0.9	0.95	
8	2702070	Orange	5	60	35	0.8	0.901	1.1	1.1	

0001

10. SN-91- SA-91 (LP) "MIN PRESSURE"

Item	Spring Code	Spring Color	d	Lo	De	N.	Spring Range (Bar)			
							Min	Min	Max	Max
1	2700338	White	1.3	40	15	0.01	0.01	0.025	0.028	
2	2700377	Yellow	1.5	40	15	0.022	0.026	0.045	0.049	
3	2700464	Orange	1.7	40	15	0.04	0.046	0.095	0.105	
4	2700513	Red	2	40	15	0.08	0.096	0.125	0.135	
5	2700713	Green	2.3	40	15	0.11	0.126	0.2	0.205	
6	2700750	Black	2.5	40	15	0.195	0.201	0.5	0.52	
7	2700985	Brown	3	40	15	0.46	0.501	0.9	0.9	


0010

Key:
d = Wire Diameter (mm), Lo = Spring Length (mm), De = External Diameter (mm), N = Spring Notes (See the first page)


Pietro Fiorentini Spa via E. Fermi 8/10 36057 Arcugnano (VI) ITALY VAT 08620190150 www.fiorentini.com sales@fiorentini.com

Date: Report: Return to sizing: 3888651-1-158-4420-582e-03a93e3ca263 Pag: 1 / 4

The app will show the **technical table** with the selected measurement unit

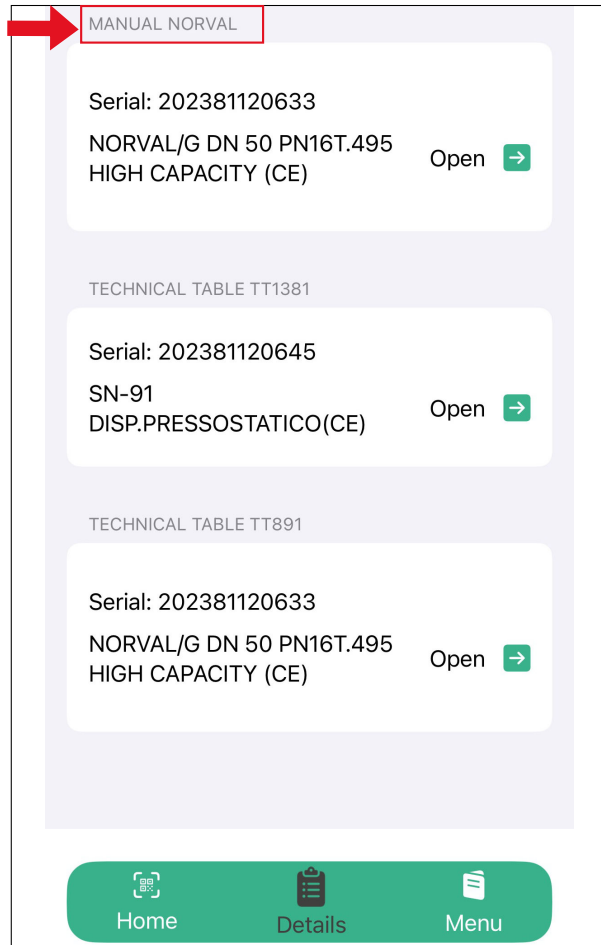


To **consult** the **technical manual**, click on **“Open”** in the corresponding section

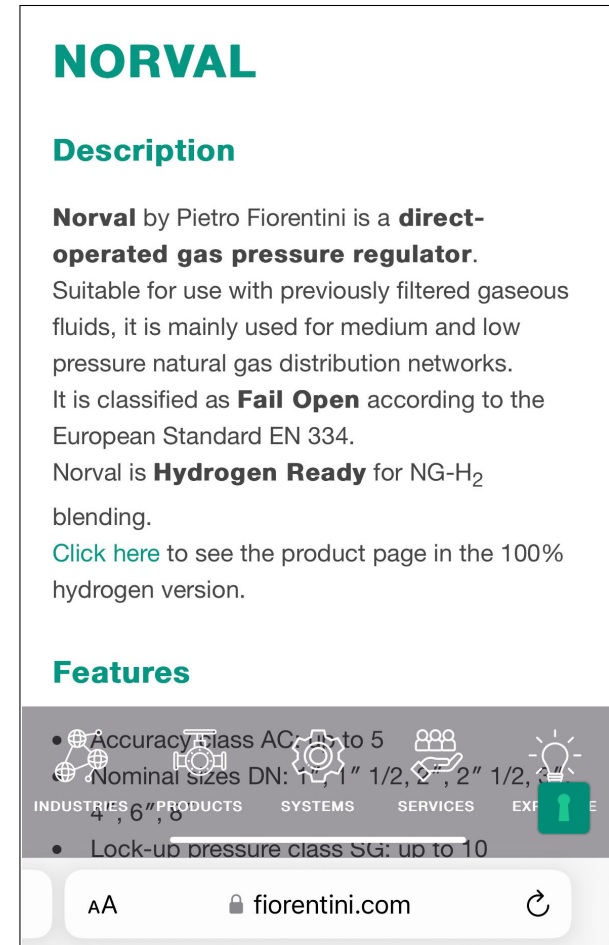


The app will show the **Pietro Fiorentini site page** for the selected product


5 - FEEDBACKS & LOG OUT

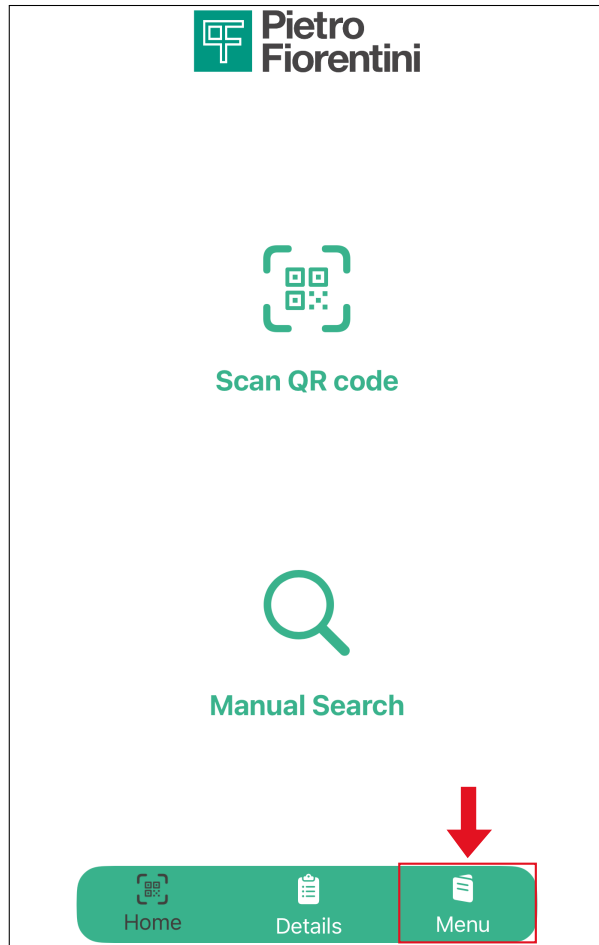

Return to the home page and **click** on the “**Menu**” icon to access other account functions

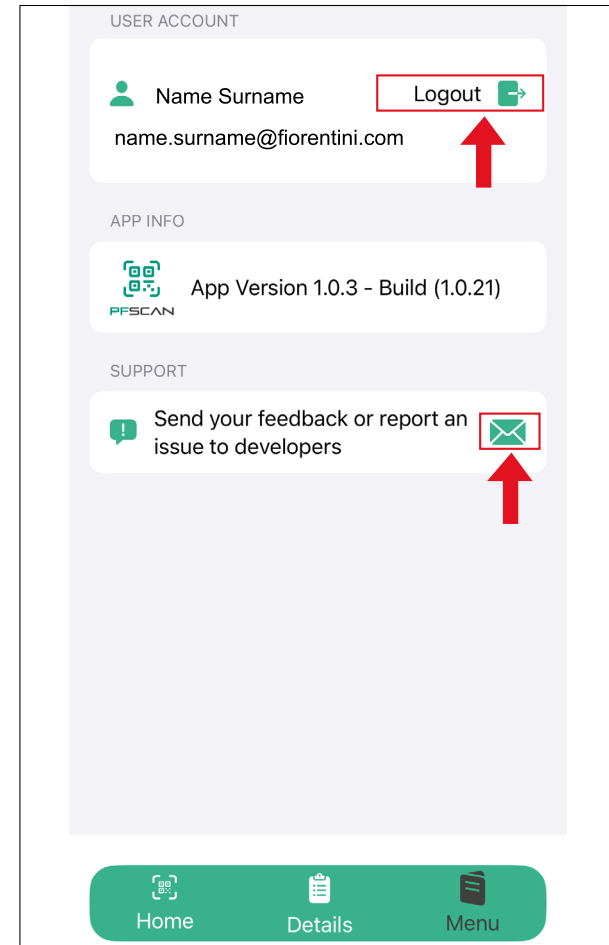

Click on the envelope icon for **reports**
Click on “**Logout**” to disconnect the account

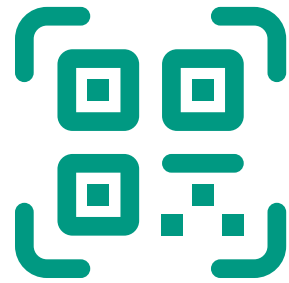

PFSCAN